



Global Barrier Services

Slipcoat-IRC™ Application Instructions

Asphalt Truck Box

1. Equipment

- * Powered or hand (pump up type) spray system.
- * Make sure the spray tip is clear of any debris.

2. Product

- Make sure the **Slipcoat IRC™** product is at least 60-70 degrees F or higher for optimal viscosity.
- DO NOT mix the product with water – **Slipcoat IRC™** is delivered ready to use.

3. Location

- * Whenever possible, apply the **Slipcoat IRC™** product in an area protected from wind and rain.
- * If using a powered spray system, make sure there is appropriate power available for the spray pump system at your application site.

4. Surface Inspection & Preparation

- * Inspect the surface to be treated with **Slipcoat IRC™** for debris (asphalt, dirt, fines, etc.) and clean out if more than 10% of the application area is not clear.
- * The surface should be as clean and dry as possible prior to application.
- * The **Slipcoat IRC™** product should be applied directly to the metal surface of the truck box.

DO NOT APPLY OVER SNOW, ICE OR WATER.



5. Application

- * If using a powered system, turn the pump system on.
- * Using the wand applicator, spray ALL of the interior surfaces of the truck box with a light coating of **Slipcoat IRC™**.

DO NOT OVER APPLY. A 20 – 25 ton asphalt truck box will require no more than 1.5 – 2 pints of product.

- * Make sure that the corners of the box and any other area where build-up might begin are well coated.
- * The **Slipcoat IRC™** product should be applied much like spray paint – if you start to see the product dripping/running down the sides and/or pooling in the bottom of the box, stop applying.
- * If there is any debris in the box, apply extra product around the edges. **Slipcoat IRC™** will penetrate underneath and the debris will release on the next dump.
- * The equipment should be **sprayed after each of the first 3 consecutive loads**. This will allow the product to sufficiently penetrate the surface of the equipment, allowing spray volume and frequency to be reduced.
- * After applying after each of the first 3 loads, monitor the equipment after each subsequent load and re-apply as necessary.
- * Log the time and amount required for each spray.
- * Log the number of loads between the last seasoning spray (first three consecutive applications) and when build-up starts to become evident – this will determine the number of loads between applications.

IMPORTANT

DO NOT apply to walkways, ladders, steps, hand-rails or any other surface/area that it may pose a slip hazard

DO NOT apply to lights, windows or other glass/translucent surfaces

Be aware of and clean up any overspray or spilled product

STORAGE OF THE SLIPCOAT IRC™ PRODUCT

Store the **Slipcoat IRC™** product in a protected area.

Store the spray wand and pump equipment in a protected area where it will not be damaged or collect dirt/debris in the spray tip.

Product Support Contact Information:

Global Barrier Services, Inc.

1001 Avenida Pico, Suite C-433, San Clemente, CA 92673

Tel. 949 542 7440

Email. info@globalbarrierservices.com